

**TRUCK**  
PERFORMANCE

**EVO<sup>HT</sup>**



**EDGE**

[www.edgeproducts.com](http://www.edgeproducts.com)

# TABLE OF CONTENTS

## GETTING STARTED

BASIC MENU FLOWCHART.....	3
BEFORE YOU BEGIN.....	4
CARB/EPA COMPLIANCE.....	5
DOWNLOAD SPARK UPDATER TOOL.....	6
PRODUCT UPDATES USING SPARK.....	8

## TUNING

CONNECTING WITH THE VEHICLE.....	10
QUICK TUNE.....	10
TUNING LEVELS EXPLAINED.....	12
ADVANCED TUNING.....	14
ADVANCED TUNING OPTIONS EXPLAINED.....	16
RETURNING YOUR VEHICLE TO STOCK.....	18
COMMON TUNING QUESTIONS.....	19

## DIAGNOSTICS

READ DTC.....	20
CLEAR DTC.....	21

## DATA LOGGING

DATA LOGGING - SPEED.....	22
DATA LOGGING - DISTANCE.....	23
DATA LOGGING - ADVANCED.....	24

## INFORMATION, OPTIONS, AND SETTINGS

 
VEHICLE IDENTIFICATION.....	26
VEHICLE FUNCTIONS.....	27
TUNER INFORMATION.....	28
VEHICLE INFORMATION.....	29
VEHICLE OPTIONS.....	30
DISPLAY SETTINGS.....	31

## APPENDIX

TROUBLE SHOOTING.....	33
SAFETY WARNING AND CAUTION.....	36
SAFETY GUIDELINES.....	37
WARRANTY INFORMATION.....	38
STORAGE AND MAINTENANCE.....	41

# BASIC MENU FLOWCHART

**Some of the menu options or features displayed in this manual are vehicle specific, and may not be available for your make and model.**

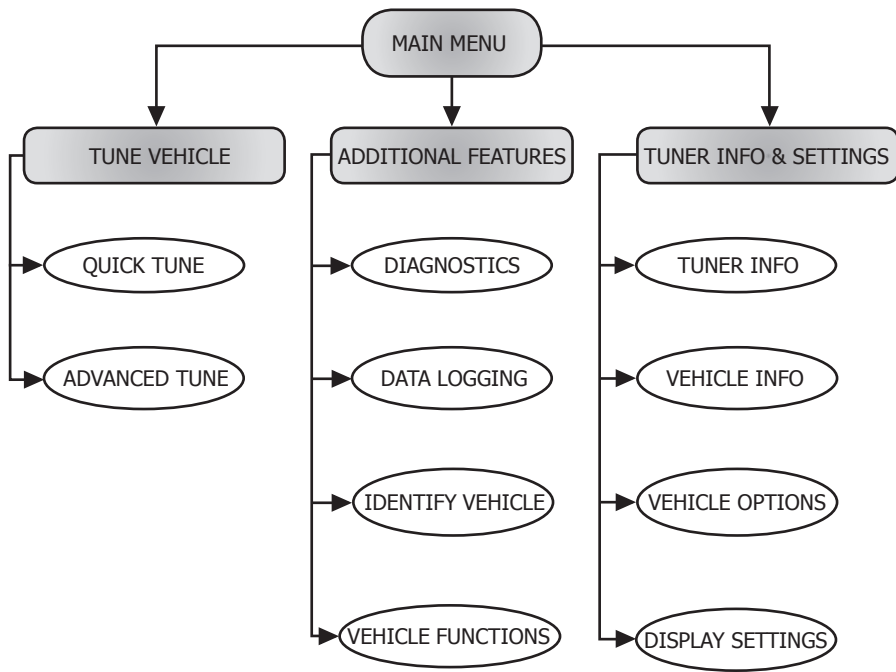

# BEFORE YOU BEGIN

## LIST OF COMPONENTS

 
### 1. HT DEVICE



### 2. USB CABLE




## BUTTON FUNCTIONALITY

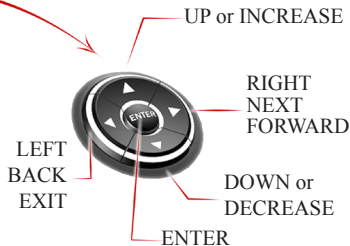

### NAVIGATING TIPS:


- To move back to the previous menu, press the ◀ button.
- To move forward to the next menu, you can press either **ENTER** or ▶ button to enter the highlighted option.
- The Δ & ▽ buttons are used to select menu options, as well as adjust values for certain features.

 This product meets the emissions compliance requirements of the California Air Resources Board and Federal Environmental Protection Agency and is legal for sale and use on pollution-controlled vehicles operated on public streets and highways. It must be installed and operated according to the instructions provided in this user's manual. Included with this product is a sticker like the one pictured for you to keep in your vehicle. You can either apply it somewhere on the vehicle (e.g., the inside end of driver's door) or simply store it in your glove box. The purpose of these stickers is to inform anyone who may have questions regarding the use of your Edge product and how it affects emissions. For example, it would be something to show an emissions technician if questioned when taking your vehicle in for an emissions check to let him/her know the product is CARB emissions compliant.

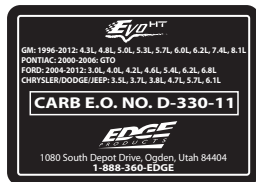

*NOTE: The stickers included in some products apply to products that have received CARB exemption for emissions compliance.*

# DOWNLOAD SPARK UPDATER TOOL

- 1 Go to [www.edgeproducts.com](http://www.edgeproducts.com)
- 2 Click the **Spark/EvoHT Software Download** button.
- 3 Click the **Run** button located on the pop-up menu.
- 4 Read and click the box to **Accept** the license agreement terms.
- 5 Click the **Install** Button, then the **Finish** button once the download is complete.
- 6 Double-click the Spark desktop  icon.
- 7 Fill out the registration form.
- 8 Refer to the next section for performing product update.

**TIP:** Use a wired internet connection vs. wireless, air card, or satellite connections. This will minimize potential connection issues that may affect the update process.

1

 
## SHOP ONLINE

- View All Products
- New Releases
- Fusion Software Download
- Spark/EvoHT Software Download
- Performance Products
- Towing Products
- Fuel Economy Products
- Gauges/Monitors
- Mounting Devices

2




3

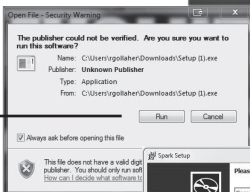

4

 5

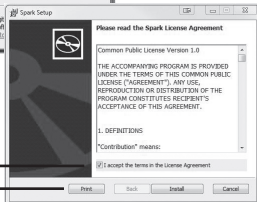

# PRODUCT UPDATES USING SPARK

① Double-click the **Spark Icon** located on your computer's desktop.

② Connect your device to the computer using the supplied USB cable.

(Spark will automatically search for updates related to your device.)

③ Click the **Update** button.

(The update process will start and finish automatically. Once the update is complete, you may be directed to the **Online Store**. To further update your device using the online store, refer to the following steps.)

④ Click on any or all of the available options.

(A check mark will appear in the upper right corner.)

⑤ Click the **Purchase** button.

⑥ If required, read and **Accept** the disclaimer.

 
⑦ Fill in the required information and click **Go to Review**.

(Here you can check the information you filled in before submitting the order.)



⑧ Click the **Place Order** button to complete your order.

⑨ If a purchase was made, follow steps 1-3 above to complete the update.



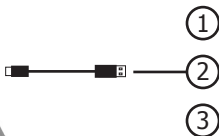

**CAUTION: Do not unplug the USB while the device is being updated. Once the update is complete, you will be informed that it is safe to disconnect.**

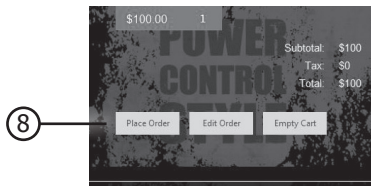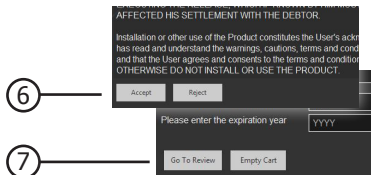  

# CONNECTING WITH THE VEHICLE



1. Plug the HT into the OBDII port.

(The programmer will automatically power-on once it has been connected.)

**CAUTION:** Do not remove or bump the OBD-II connector during any programming sequence. If you do, the vehicle may not start.

## QUICK TUNE



**Quick Tune** = Changes the power level of your vehicle using the most popular features and settings.

**NOTE:** Not all features are available on every make, model, and engine.

**CAUTION:**

We do not recommend programming your vehicle while parked in unsafe locations including heavy traffic, or places without cell phone service.

# QUICK TUNE CONT'D

**1** Use the **up/down** arrows to highlight "Tune Vehicle", then press **Enter**.

## Main Menu

**Tune Vehicle**  
Additional Features  
Tuner Info & Settings

**2** Use the **up/down** arrows to highlight "Quick Tune", then press **Enter**.

## TUNE VEHICLE

**Quick Tune**  
Advanced Tune

**3** Follow the on-screen instructions.

## EDGE PRODUCTS

Turn the Ignition ON  
Do NOT START Engine

**Press Enter to Continue**

**4** Follow the on-screen instructions, then Press **Enter**. (if applicable)

Please make sure the following  
are off: Automatic Headlights,  
Automatic Wipers, Factory  
Radio, Air conditioning

**Press Enter to Continue**

**NOTE** The device will  
begin to read the files on your  
vehicle's computer. This may  
take a few minutes.

## EDGE PRODUCTS

Initialization. . .  
Please Wait. . .

**5** Highlight one of the  
available tuning levels, then  
Press **Enter**.

## SELECT TUNE LEVEL

**Performance**  
Tow  
87 Octane  
Stock w/ Options

**6** Highlight "YES", then  
press **Enter** to start the  
installation process.

## EDGE PRODUCTS

Install the  
Performance File?

NO

**YES**

**7** Follow the on-screen instructions. A screen will appear informing you that the vehicle has been updated with the tune, and lets you know how to proceed.

## EDGE PRODUCTS

Turn Ignition OFF

**Press Enter to Continue**

## EDGE PRODUCTS

Turn the Ignition ON  
Do NOT START Engine

**Press Enter to Continue**

# TUNING LEVELS EXPLAINED

## KEY:

- ⊙ = Towing is not recommended for this tune
- ◆ = Octane Requirements vary for gas vehicles. Follow recommended guidelines on the device.
- ↓ = Tow rated up to Edge Products recommended tow limits. See limits for your vehicle displayed by the HT during the programming process.
- ‡ = Tow rated up to OEM max towing recommendation.

## Availability of specific tunes may vary based on your vehicle's make and model:

⊙◆**Performance** - Provides maximum engine and transmission performance gains.

⊙**87 Performance** - Requires the use of 87 octane gas and is used for extra horsepower, torque and driveability for on road and off road uses. The tune is calibrated for 2WD, 4WD-HI, and 4WD-LO uses.

⊙**91 Performance** - Requires the use of 91 octane gas or better and is used for premium horsepower, torque, and driveability for on road and off road uses. The tune is calibrated for 2WD, 4WD-HI, and 4WD-LO uses.

⊙**93 Performance** - Requires the use of 93 octane gas and is used for maximum horsepower, torque, and driveability for on road and off road uses. The tune is calibrated for 2WD, 4WD-HI, and 4WD-LO uses.

⊙**87 Octane** - Allows you to run 87 octane regardless of the manufacturer's recommendation.

◆↓**Light Load Tow** - Optimizes engine and transmission performance for mid-weight range towing applications

**#Heavy Load Tow** - Requires the use of 91 octane gas or better and is used for optimized engine and transmission performance for heavy towing applications.

---

**Towing** - Requires the use of 91 octane gas or better and is used for optimized towing up to the OEM recommended towing limits. This tune is safe to use in 4WD-HI or 4WD-LO and is available for all Jeeps covered by Edge Products.

**NOTE: If a towing tune is not available, use 87 Tune with 91 Octane fuel.**

---

⊖ **Extreme** - This is an aggressive tune used for maximum horsepower, torque, and driveability.

---

**Mileage XS** - Requires 87 octane gas and is used for fuel mileage gains. Great for on road and off road use. The tune is calibrated for 2WD, 4WD-HI, and 4WD-LO uses

---

**Stock** - Returns vehicle to factory stock. Removed all Edge Products tuning from your vehicle. It is recommended that you calibrate your vehicle back to stock prior to taking it in for service or maintenance.

# ADVANCED TUNING



**Advanced Tune** = Changes the power level of your vehicle and allows you to select settings for advanced features and settings.

**NOTE:** Not all features/screens are available on every make, model, and engine.

**CAUTION:** Do not remove or bump the OBD-II connector during any programming sequence. If you do, the vehicle may not start.

**1** Use the **up/down** arrows to highlight "Tune Vehicle", then press **Enter**.

## Main Menu

**Tune Vehicle**  
Additional Features  
Tuner Info & Settings

**2** Use the **up/down** arrows to highlight "Advanced Tune", then press **Enter**.

## TUNE VEHICLE

Quick Tune  
**Advanced Tune**

**3** Follow the on-screen instructions.

## EDGE PRODUCTS

Turn the Ignition ON  
Do NOT START Engine  
**Press Enter to Continue**

**4** Follow the on-screen instructions. (if applicable)

Please make sure the following are off: Automatic Headlights, Automatic Wipers, Factory Radio, Air conditioning

**Press Enter to Continue**

**NOTE** The device will begin to read the files on your vehicle's computer.

## EDGE PRODUCTS

 
Initialization. . .  
Please Wait. . .

**5** Highlight "Power Levels", then press **Enter**.


## Advanced Tune

**Power Levels**

**6** Highlight one of the available power levels, then Press **Enter**.

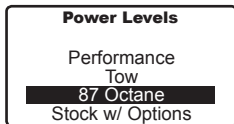

 **7** Highlight "Options", then press **Enter**.

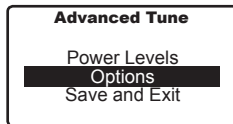

**8** Highlight an available Option, then press **Enter**. (Availability depends on vehicle make and model)



 
**9** Adjust the value of the option you chose using the arrow keys on the device, then press **Enter**.




**10** Highlight "Continue", then press **Enter**. The tuning files will be built base on your specified settings.




**11** Highlight "YES", then press **Enter**. The device will begin the installation process.

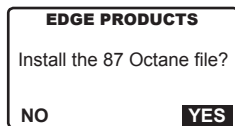

 **12** Follow the on-screen instructions.

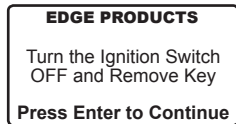

 **13** Once the programming is complete, press **Enter**. A screen will appear informing you that the vehicle has been updated with the tune, and lets you know how to proceed.

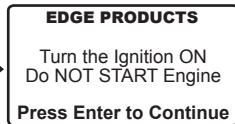

# ADVANCED TUNING OPTIONS EXPLAINED

## Availability of specific options may vary based on your vehicle's make and model:

---

**Speed Limiter** - Adjusts the top speed limiter by increments or fixed values.

- △ The vehicle must have appropriate speed rated tires.
  - △ Do not exceed proper operating conditions
  - △ Obey all traffic laws
  - △ For use only on a controlled track. Never exceed legal limits on public roadways.
- 

**Rev Limiter** - Adjusts engine rev limiter by increments or fixed values.

- △ Do not exceed proper operating conditions.
- 

**Tire Size** - Corrects the speedometer, odometer, and automatic transmission shift points for wheel and tire changes.

---

### TIP FOR MEASURING TIRE SIZE:

Measure from the ground to the top of your tire. Place a ruler or flat level item on the top of your tire to measure accurately. Measure in 1/4 inch increments rounding up.



### **WARNING**

Increasing the height of your vehicle raises the center of gravity and can affect stability and control. Use caution on turns and when making steering corrections.

---



**Axle (Gear) Ratio** - Corrects the speedometer, odometer and automatic transmission shift points for rear end gear changes.

⚠ Confirm aftermarket parts are installed before adjusting this option.

---

**Automatic Transmission Shift Points** - Adjusts transmission shift points for optimized driveability and operation.

---

**Automatic Transmission Shift Pressure** - Adjust transmission shift pressure in PSI to allow for a more aggressive shifts.

---

**Cooling Fan** - Adjusts fan turn ON temperature.

---

**Manual Transmission Skip Shift** - Enables or disables Computer Aided Gear Selection (CAGS) for manual transmissions.

---

**WOT Restriction** - Enables or disables factory Wide Open Throttle (WOT) restriction.

---

# RETURNING YOUR VEHICLE TO STOCK

**1** Use the **up/down** arrows to highlight “Tune Vehicle”, then press **Enter**.

## Main Menu

Tune Vehicle  
Additional Features  
Tuner Info & Settings

**2** Use the **up/down** arrows to highlight “Quick Tune”, then press **Enter**.

## TUNE VEHICLE

Quick Tune  
Advanced Tune

**3** Follow the on-screen instructions.

## EDGE PRODUCTS

Turn the Ignition ON  
Do NOT START Engine

**Press Enter to Continue**

**4** Highlight “Stock”, then Press **Enter**.

## Tune Vehicle

Economy  
Stock

**NOTE** The device will begin to read the files on your vehicle's computer.

## EDGE PRODUCTS

Please Wait. . .

**5** Highlight “YES”, then press Enter. The device will start the installation process.

## EDGE PRODUCTS

RETURN the Vehicle to STOCK?

NO

**YES**

**6** Follow the on-screen instructions.

## EDGE PRODUCTS

Turn the Ignition Switch  
OFF and Remove Key

**Press Enter to Continue**

**7** Once the programming is complete, press **Enter**.

## EDGE PRODUCTS

Vehicle now has STOCK  
TUNING Installed

# COMMON TUNING QUESTIONS

## Questions and Answers

**Q:** Can my HT program more than one vehicle at a time?

**A:** No, only after you return your first vehicle back to factory stock.

---

**Q:** Does Edge Products support custom tuning?

**A:** No, custom tuning will not be offered at this time.

---

**Q:** What aftermarket accessories will my HT work with?

**A:** HT programmers are engineered to work with the following parts right out of the box: throttle body spacers, shorty headers, cat-back exhaust system, and cold air intake kits. Compatibility may vary by make and model.

---

**Q:** How do I change my vehicle's calibration?

**A:** Refer to the TUNING sections of this guide for detailed instructions.

**CAUTION:** Before taking your vehicle into a service center, return your vehicle to stock. The service center might reprogram your vehicle with an updated program without your knowledge. If you do not use this device to return your vehicle to factory stock and your vehicle is reprogrammed by the service center, the programmer will no longer be able to program your vehicle.

# READ DTC



**Read DTCs** = allows you to troubleshoot issues that your vehicle may be experiencing. Most vehicles will illuminate the in-dash check engine light.

A Diagnostic Trouble Code (DTC) arises when a vehicle's computer detects a sensor failure or a parameter outside of specific range. If a code is present, the display will give a code # (e.g. P0237) and a description of the issue.

**1** Use the **up/down** arrows to highlight “Additional Features”, then press **Enter**.

## Main Menu

Tune Vehicle  
**Additional Features**  
Tuner Info & Settings

**2** Use the **up/down** arrows to highlight “Diagnostics”, then press **Enter**.

## Additional Features

**Diagnostics**  
Data Logging  
Identify Vehicle  
Vehicle Functions

**3** Use the **up/down** arrows to highlight “Read DTCs”, then press **Enter**.

## Diagnostics

**Read DTCs**  
Clear DTCs

**4** Follow the on-screen instructions.

## EDGE PRODUCTS

Turn the Ignition ON  
Do NOT START Engine

**Press Enter to Continue**

**5** Allow time for the device to search for DTCs. If more than one DTC is present, use the **up/down** arrows to review them. Once you have the information you need, you can press **Enter** to return to the Diagnostics menu.

## EDGE PRODUCTS

Reading the Vehicle DTCs



## DTC Message 1 of 11

**P0237**  
TURBO BOOST PRES-  
SURE SENSOR CIRCUIT  
LOW

# CLEAR DTC



**Clear DTCs** = allows you to clear the DTC and turns off the check engine light.

**NOTE:** If a DTC persists, this could indicate a vehicle malfunction. We recommend seeking a qualified professional in resolving the issue.

**CAUTION:** Program the vehicle back to stock prior to service.

**1** Use the **up/down** arrows to highlight “Additional Features”, then press **Enter**.

## Main Menu

Tune Vehicle  
**Additional Features**  
Tuner Info & Settings

**2** Use the **up/down** arrows to highlight “Diagnostics”, then press **Enter**.

## Additional Features

**Diagnostics**  
Data Logging  
Identify Vehicle  
Vehicle Functions

**3** Use the **up/down** arrows to highlight “Clear DTCs”, then press **Enter**.

## Diagnostics

Read DTCs  
**Clear DTCs**

**4** Follow the on-screen instructions.

## EDGE PRODUCTS

Turn the Ignition ON  
Do NOT START Engine

**Press Enter to Continue**

**5** Allow time for the device to clear the DTCs. One the DTCs have been cleared, press **Enter** to return to the Diagnostics menu.

## EDGE PRODUCTS

Clearing DTCs Please  
Wait. . .

## EDGE PRODUCTS

Vehicle DTCs  
sucessfully Cleared

**Press Enter to Exit**

# DATA LOGGING - SPEED



**Log by Speed** = allows you to test and log the time it takes to reach a predefined speed. The HT stores your Best Times as well as your Last Run information.

**CAUTION:** Do not exceed legal speed limits on public roadways.

**WARNING:** Misapplication or misuse of this product could lead to a serious or fatal accident. Comply with all safety information in this manual, and your vehicle owner's manual. Follow safety, installation and operating instructions in this User Manual to assure proper use.

**1** Use the **up/down** arrows to highlight "Additional Features", then press **Enter**.

## Main Menu

Tune Vehicle  
**Additional Features**  
Tuner Info & Settings

**2** Use the **up/down** arrows to highlight "Data Logging", then press **Enter**.

## Additional Features

Diagnostics  
**Data Logging**  
Identify Vehicle  
Vehicle Functions

**3** Use the **up/down** arrows to highlight "Log by Speed", then press **Enter**.

## Data Logging

**Log by Speed**  
Log by Distance  
Advanced

**4** Use the **up/down** arrows to highlight a timed test, then press **Enter**.

## Log by Speed

**0 to 40 Time**  
0 to 50 Time  
0 to 50 Time  
0 to 70 Time  
Best Times

**5** Follow the on-screen instructions.

## EDGE PRODUCTS

Stop Vehicle to  
Initialize Run

## EDGE PRODUCTS

Run will start when  
vehicle moves.

**Press Enter to ABORT**

**6** Once the time has stopped, press **Enter** to exit to the Log by Speed menu.

## EDGE PRODUCTS

Time 04.20  
Top Speed 040

**Press Enter to Exit**

# DATA LOGGING - DISTANCE



**Log by Distance** = allows you to test and log the time it takes to reach a pre-defined distance. The HT stores your Best Times as well as your Last Run information.

**CAUTION:** Do not exceed legal speed limits on public roadways.

**WARNING:** Misapplication or misuse of this product could lead to a serious or fatal accident. Comply with all safety information in this manual, and your vehicle owner's manual. Follow safety, installation and operating instructions in this User Manual to assure proper use.

**1** Use the **up/down** arrows to highlight "Additional Features", then press **Enter**.

## Main Menu

Tune Vehicle  
**Additional Features**  
Tuner Info & Settings

**2** Use the **up/down** arrows to highlight "Data Logging", then press **Enter**.

## Additional Features

Diagnostics  
**Data Logging**  
Identify Vehicle  
Vehicle Functions

**3** Use the **up/down** arrows to highlight "Log by Distance", then press **Enter**.

## Data Logging

Log by Speed  
**Log by Distance**  
Advanced

**4** Use the **up/down** arrows to highlight a timed test, then press **Enter**.

## Log by Distance

**60 Foot Time**  
330 Foot Time  
1/8 Mile Time  
1000 Foot Time  
1/4 Mile Time

**5** Follow the on-screen instructions.

## EDGE PRODUCTS

Stop Vehicle to  
Initialize Run

## EDGE PRODUCTS

Run will start when  
vehicle moves.

**Press Enter to ABORT**

**6** Once the time has stopped, press Enter to exit to the Log by Distance Screen.

## EDGE PRODUCTS

Time 01:55  
Distance 60

**Press Enter to Exit**

# DATA LOGGING - ADVANCED



**Advanced** = data logging features can be used to monitor and record individual “live” sensor values of computer data. Specific features for your vehicle will automatically be available once the HT has identified your vehicle. You are allowed to monitor up to four (4) different parameters at a time.

**1** Use the **up/down** arrows to highlight “Additional Features”, then press **Enter**.

## Main Menu

Tune Vehicle  
**Additional Features**  
Tuner Info & Settings

**2** Use the **up/down** arrows to highlight “Data Logging”, then press **Enter**.

## Additional Features

Diagnostics  
**Data Logging**  
Identify Vehicle  
Vehicle Functions

**3** Use the **up/down** arrows to highlight “Advanced”, then press **Enter**.

## Data Logging

Log by Speed  
Log by Distance  
**Advanced**

**4** Highlight the available parameter types (Availability depends on vehicle make and model). Press **Enter**.

## Advanced

Select Buffer  
**Engine Misc**  
Fuel Trim Press  
Time & Distance  
Misc. Non-engine

**5** Look through the available parameters, and select up to four. Press **Enter** to select. Once you have selected a parameter, a double arrow will appear to the left of it. Press the **Left** arrow button to return to the screen shown in step 4.

## Advanced

Calc Eng Load  
**Engine Temp**  
In. Man Pressure  
Engine RPM  
Intake Air Temp



## Advanced

Calc Eng Load  
**» Engine Temp**  
In. Man Pressure  
Engine RPM  
Intake Air Temp



 
**6** Once a parameter(s) is selected, “Start Display” will appear. Press **Enter** to continue.

**Data Logging**

Start Display  
Clear Selected  
Select Buffer  
»Engine Misc  
Fuel Trim Press

**7** This first screen (left) means that if you press **Enter** during the next screen (right), the data being displayed will be recorded until you hit **Enter** again. While recording a progress bar will show at the top of the lower left gauge.

To Start Data Logging  
Press Enter  
  
To stop Press Enter again  
  
The bar will build while  
recording

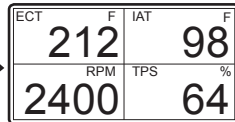

**8** When you are done viewing the gauge screen, press the **Left** arrow button to return to the menu.

**Advanced**

Start Display  
Clear Selected  
Select Buffer  
»Engine Misc  
Fuel Trim Press

**9** If you would like to view parameters other than what you selected, highlight “Clear Selected”, then press **Enter**. This will de-select the four you previously selected, and allow you to choose the next set.

**Advanced**

Start Display  
Clear Selected  
Select Buffer  
Engine Misc  
Fuel Trim Press

**10** Contact Edge Products tech support to learn more about how to retrieve your recorded data:

**(888) 360-EDGE (3343) 8:00 am - 5:00 pm MST**

# VEHICLE IDENTIFICATION



**Identify Vehicle** = displays specific information regarding your vehicle and its components:

- Vehicle Engine Control Unit (Vehicle ECU)
- Diagnostic Communication (Diagnostic Comm)
- Vehicle Identification Number (VIN)
- Engine Control Module Engine Part Number (ECM Engine PN)

**1** Use the **up/down** arrows to highlight “Additional Features”, then press **Enter**.

## Main Menu

Tune Vehicle  
**Additional Features**  
Tuner Info & Settings

**2** Use the **up/down** arrows to highlight “Identify Vehicle”, then press **Enter**.

## Additional Features

Data Logging  
**Identify Vehicle**  
Vehicle Functions

**3** Follow the on-screen instructions, then press **Enter**.

## EDGE PRODUCTS

Turn the Ignition ON  
Do NOT START Engine  
**Press Enter to Continue**

**4** Review the information on each screen, then press **Enter**.

## EDGE PRODUCTS

Vehicle ECU:  
Cummins 848  
**Press Enter to Continue**

## EDGE PRODUCTS

Diagnostic Comm:  
J1850  
**Press Enter to Continue**

## EDGE PRODUCTS

VIN: #####  
#####  
**Press Enter to Continue**

## EDGE PRODUCTS

ECM Engine PN:  
25321563AI  
**Press Enter to Continue**

# VEHICLE FUNCTIONS



**Vehicle Functions** = allows you to adjust the values for specific functions to accommodate non-stock components that have been installed. Examples are as follows:

- Tire Size
- Tire Pressure
- Axle Ratio
- Engine Idle
- T.Case High
- Mobile Desoot Enable (Diesel only)
- T.Case Low
- Return To Stock

*(NOTE: If your device does not have all or any of the Vehicle Functions mentioned above, your vehicle does not allow for these functions to be modified.)*

**1** Use the **up/down** arrows to highlight “Additional Features”, then press **Enter**.

## Main Menu

Tune Vehicle  
**Additional Features**  
Tuner Info & Settings

**2** Use the **up/down** arrows to highlight “Identify Vehicle”, then press **Enter**.

## Additional Features

Data Logging  
Identify Vehicle  
**Vehicle Functions**

**3** Follow the on-screen instructions, then press **Enter**.

## EDGE PRODUCTS

 
 
Turn the Ignition ON  
Do NOT START Engine  
**Press Enter to Continue**

**4** Select an available option from the list provided. Press **Enter** to continue.

## Vehicle Functions

**Tire Size**  
Axle Ratio  
T.Case High  
T.Case Low

**5** Using the arrow keys, adjust the values, then press **Enter**.

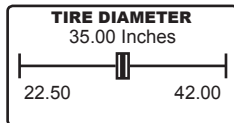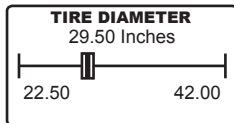

# TUNER INFORMATION



**Tuner Info & Settings** = provides specific information related to the device. This information will be used during any phone conversation or online chats with our Technical Service Representatives. This information will allow them to understand how they can best serve you.

**1** Use the **up/down** arrows to highlight "Tuner Info & Settings", then press **Enter**.

## Main Menu

Tune Vehicle  
Additional Features  
**Tuner Info & Settings**

**2** Use the **up/down** arrows to highlight "Tuner Info", then press **Enter**.

## Tuner Info & Settings

**Tuner Info**  
Vehicle Information  
Vehicle Options  
Display Settings

**3** Press **Enter** to view each screen, then to return to the menu in step 2 above.

## Tuner Info & Settings

Dodge 36030  
V3.03.06  
SN 200357614

**Press Enter to Continue**

Serial Number (example)  
Version Number (example)  
Part Number (example)

## Tuner Info & Settings

Diesel DB V120  
Car DB V200  
Gas Truck DB V584

**Press Enter to Continue**

Gas Truck Database  
Version (example)  
Car Database  
Version (example)  
Diesel Database  
Version (example)

## Tuner Info & Settings

5.9 Diesel Cal DB  
V120  
6.7 Diesel Cal DB  
V080

**Press Enter to Continue**

Calibration Database  
Version (example)  
Calibration Database  
Version (example)

# VEHICLE INFORMATION



**Vehicle Information** = provides specific information related to your vehicle. This information will be used during any phone conversation or online chats with our Technical Service Representatives. This information will allow them to understand how they can best serve you.

**1** Use the **up/down** arrows to highlight “Tuner Info & Settings”, then press **Enter**.

## Main Menu

Tune Vehicle  
Additional Features  
**Tuner Info & Settings**

**2** Use the **up/down** arrows to highlight “Vehicle Information”, then press **Enter**.

## Tuner Info & Settings

Tuner Info  
**Vehicle Information**  
Vehicle Options  
Display Settings

**3** Press **Enter** to return to the menu in step 2 above.

### Tuner Status:

Unused

### Vehicle ID:

05094402AL

Last 9 VIN: #####

Press Enter to Continue

**Tuner Status:** the current status of the device in regards to tuning.

**1) Unused** = not “locked” to a vehicle. When a programmer is used to tune a vehicle, the device is locked to that vehicle until it is used to return that same vehicle back to stock.

**2) Locked Programmed OK** = tuner has been used to program a vehicle and was successful in doing so.

**Vehicle ID:** displays the vehicle's identification number.

**Last 9 VIN:** displays the last 9 digits of the Vehicle's Identification Number (VIN).

# VEHICLE OPTIONS



**Vehicle Options** = provides information regarding the custom options that are available for your vehicle and the current state they are in.

**1** Use the **up/down** arrows to highlight “Tuner Info & Settings”, then press **Enter**.

## Main Menu

Tune Vehicle  
Additional Features  
**Tuner Info & Settings**

**2** Use the **up/down** arrows to highlight “Vehicle Options”, then press **Enter**.

## Tuner Info & Settings

Tuner Info  
Vehicle Information  
**Vehicle Options**  
Display Settings

**3** Highlight “Power Level”, then press **Enter**. Press **Enter** to exit.

## Vehicle Options

**Power Level**  
Options

## Vehicle Options

**EDGE** Economy **SPORTS**

Press Enter to Exit

Displays what tune is currently installed.

**4** Highlight “Options”, then press **Enter**. Press **Enter** to exit.

## Vehicle Options

Power Level  
**Options**

## Vehicle Options

Rev Limiter: Stk  
Spd Limiter: Skt  
Tire Size: Stk

Press Enter to Exit

Displays the current status of the available options provided in advanced tuning.

# DISPLAY SETTINGS



**Display Settings** = allows for adjustment of the visual settings of the display.

**1** Use the **up/down** arrows to highlight “Tuner Info & Settings”, then press **Enter**.

## Main Menu

Tune Vehicle  
Additional Features  
**Tuner Info & Settings**

**2** Use the **up/down** arrows to highlight “Display Settings”, then press **Enter**.

## Tuner Info & Settings

Tuner Info  
Vehicle Information  
Vehicle Options  
**Display Settings**

**3** Highlight the setting you would like to adjust, then press **Enter**.

## Display Settings

**Set Contrast**  
Set Backlight  
Set Scroll Speed

Adjusts how fast menus can be navigated

Adjusts the brightness of the display

Adjusts the darkness of text and graphics

**4** Use the **up/down** arrows to adjust the setting, then press **Enter**.

## EDGE PRODUCTS

UP - Increase  
DOWN - Decrease  
Enter - Save

## Display Settings

**Set Contrast**  
Set Backlight  
Set Scroll Speed

# TROUBLE SHOOTING

## ☞ **My HT does not power up when plugged into the OBDII?**

- ✓Your vehicle's OBDII port is powered through a fuse the fuse may be blown. (In most vehicles, this is the same fuse shared by the cigarette lighter)
  - ✓Try the HT on another vehicle to make sure it powers up. If it does, then the wiring on the vehicle you are trying to program may be the issue (See your dealer for service).
- 

## ☞ **My HT Says: "Non-Stock File Detected..."**

- ✓Your vehicle may have been programmed by another device. Use that device to set your vehicle back to stock before using the HT.
- 

## ☞ **My HT displays status G-6F?**

- ✓The error code is a 'General Database Error'. It means your programmer does not have a complete database. Refer to the "Product Updates Using Spark" section of this manual and update your programmer.
- 

## ☞ **When reading the vehicle's trouble codes (DTCs), I received a P1000 error code?**

- ✓P1000 is a DTC that sometimes appears after a vehicle is programmed or the battery cables are unplugged from the battery. It will automatically clear after several drive cycles. It cannot be removed using the 'DTC Clear' function.
-



**☞ My vehicle has several aftermarket part modifications and after I program it with the HT, the vehicle does not run well?**

✓An HT is designed for stock vehicles (factory stock calibrations and stock engine & transmissions). In some cases, upgrades like air filters, shorty headers, cold air intakes, or cat-back exhausts may not be supported.

---

**☞ I left HT tuning in my vehicle and went to my dealer for service, now my HT will not work?**

✓The dealership likely updated your vehicle's calibrations, and saved over the tuning. The HT does not recognize the new files in your vehicle. Contact Edge Products customer care at 888.360.3343 to correct the situation.

---

**☞ My programmer did not complete programming and went into recovery mode?**

✓HT programmers are designed with 'Recovery Mode' which means if, for any reason, the programming process does not finish, the programmer will automatically program your vehicle back to the factory stock settings. It is necessary to follow the screen prompts, possibly requiring several 'Ignition On' and 'Ignition Off' sequences. When recovery is complete your vehicle is at factory stock. You are now able to start your vehicle normally. You may now attempt to program your vehicle again. In the event that recovery is unsuccessful or fails to complete the programming cycle, a status message will display on the programmer. Please make note

of the message displayed and contact Edge Products Customer Care at 888.360.3343.

---

☞ **My programmer works fine on my vehicle, but after I returned my vehicle to stock and tried it on another vehicle I own, the screen showed E-6D "Needs Update – why?"**

✓The HT is programmed at our factory with the latest databases meant to provide broad vehicle coverage. Your first vehicle's calibrations (tuning files) were supported by our database, but your second vehicle's calibrations are not. Update your device using the Spark update software. If an update is not available, you will receive an e-mail as soon as one is.

---

☞ **My programmer shows a 'vehicle calibration not on file' status.**

✓The HT is loaded with the latest databases meant to provide extremely broad vehicle coverage. 'Vehicle calibration not on file' status occurs when programmer does not have the necessary calibration files to program a vehicle. Update your programmer using the Spark update software. If your calibration is available it will be downloaded to your programmer for immediate use. If your calibration is not available, your calibration will be uploaded to Superchips' R&D for tuning. You will receive an e-mail as soon as your calibration is available. Calibrations are usually available in 5 business days.

## NOTES

# SAFETY WARNING & CAUTION

## SAFETY TERMS

Throughout this User Guide, you will see important messages regarding your safety or the protection of your vehicle. These messages are designated by the words WARNING or CAUTION.



***WARNING indicates a condition that may cause serious injury or death to you, your passengers or others nearby. Pay careful attention to these Warning messages, and always comply with them. They could save a life.***

***CAUTION indicates a condition that could cause damage to your vehicle. It is important to install and operate your EDGE product in conformance with instructions in this Manual. Caution alerts you to particularly important things that will keep your vehicle operating properly.***

The Edge Product you have bought is a high-performance product. As such, it does present some risks of which you should be fully aware. Do not use this product until you have carefully read the following safety information and the Owner Agreement



## **WARNING**

***Misapplication or misuse of this product could lead to a serious or fatal accident. Comply with all safety information in this manual, and your vehicle owner's manual. Follow safety, installation and operating instructions in this User Manual to assure proper use.***

## ***SAFETY GUIDELINES***

1. Do not exceed legal speed limits on public roadways. Use any enhanced speed capabilities of this product only in closed circuit, legally sanctioned racing environments expressly for this purpose. Loss of control from speeding on a public road could seriously injure you, your passengers, or others on the roadway.
2. Do not operate the device while driving. Perform all adjustments or changes while stopped. Changing a setting while under way can interfere with your attention to roadway conditions.
3. “Stacking” performance-enhancing devices or other improper installation can cause power train failure on the road. Other products may have features incompatible with your Edge device. Follow all installation and operating instructions, and do not stack products.
4. Some modifications may affect other parts of your vehicle. For example, if you remove/adjust the speed limiter in your vehicle, be sure your tires and other components are rated for the increased speeds they will have to withstand. Not doing so can lead to loss of vehicle control. Modify the speed limiter only for use in closed circuit, legally sanctioned racing environments, not for use on public roadways.

# WARRANTY INFORMATION

## LIMITED 1 YEAR WARRANTY

Edge Products, LLC, (hereafter "SELLER") gives Limited Warranty as to description, quality, merchantability, fitness for any product's purpose, productiveness, or any other matter of SELLER's product sold herewith. The SELLER shall be in no way responsible for the product's open use and service and the BUYER hereby waives all rights other than those expressly written herein. This Warranty shall not be extended or varied except by a written instrument signed by SELLER and BUYER.

The Warranty is Limited to one (1) year from the date of sale and limited solely to the parts contained within the product's kit. All products that are in question of Warranty must be returned shipping prepaid to the SELLER and must be accompanied by a dated proof of purchase receipt. All Warranty claims are subject to approval by Edge Products Inc.

Under no circumstances shall the SELLER be liable for any labor charged or travel time incurred in diagnosis for defects, removal, or reinstallation of this product, or any other contingent expenses.

If the BUYER sends back a failed unit that is out of warranty and chooses to buy a refurbished unit, the refurbished unit will only carry a 90 day warranty. If the BUYER purchases a new unit at a predetermined discounted rate, it will have the standard 1 year warranty.

Under no circumstances will the SELLER be liable for any damage or expenses insured by reason of the use or sale of any such equipment.

THE INSTALLATION OF THIS PRODUCT INDICATES THAT THE BUYER HAS READ AND UNDERSTANDS THIS AGREEMENT AND ACCEPTS ITS TERMS AND CONDITIONS.

IN THE EVENT THAT THE BUYER DOES NOT AGREE WITH THIS AGREEMENT, THE BUYER MAY PROMPTLY RETURN THIS PRODUCT, IN A NEW AND UNUSED CONDITION, WITH A DATED PROOF OF PURCHASE, TO THE PLACE OF PURCHASE WITHIN THIRTY (30) DAYS FROM DATE OF PURCHASE FOR A FULL REFUND.

***NOTE: This warranty is void for any new products purchased through auction web sites. Warranty is valid only for new products purchased through Authorized Dealers (proof of purchase required for all warranty claims).***

## **IMPORTANT INFORMATION ABOUT YOUR VEHICLE'S WARRANTY**

Many of our customers ask, "Will your product void my vehicle's manufacturer's warranty?" While the answer is straightforward from a legal standpoint, it's important to educate our customers (and all aftermarket consumers) on some industry realities and offer some common sense precautions to minimize your risk. Edge is committed to providing quality products that are safe to use. Our products do not cause damage to a vehicle when used as intended.

***CAUTION: Operate your vehicle within manufactures recommended load and weight limits as shown in the Manufactures Operator Manual. Please keep in mind that towing in anything higher than the towing level (typically Level 2) and hard driving in race or extreme performance levels using Edge products is not recommended and can cause engine damage or failure. In particular, with the use of any diesel performance product, Edge strongly recommends the installation of an exhaust gas temperature (EGT) gauge in order to ensure the engine operates within a safe temperature range. Failure to ensure safe operating engine temperature may result in engine damage or failure.***

Consumers of aftermarket products are protected by the Federal Magnusson-Moss Warranty Act. The Act states that if something breaks on your vehicle and you take it in for warranty repair, the dealer must honor your warranty unless whatever modifications you have added to your vehicle actually caused the problem in question.

However, the reality is that many dealerships have been known to void warranties on vehicles that use aftermarket products as a matter of policy. This applies in particular to those aftermarket products that produce horsepower, such as performance enhancement "chips," modified intake manifolds, or aftermarket exhaust systems, regardless of product brand.

You have strong legal protection as a consumer in regard to your vehicle's warranty. However, Edge strongly recommends you always disconnect and remove your module/programmer and monitor when you take your vehicle to a dealer for warranty work. In addition, leaving the product connected may affect dealer diagnostic analysis and scan tool functions. Edge makes every effort to produce product that can be easily removed.

***NOTE: Even if you disconnect your unit, in some situations your dealer can detect the use of any programmer—even if the unit has been removed.***

## SERVICE CENTER AND COMPATIBILITY CAUTIONS

**CAUTION:** *Return your vehicle to stock before taking it to a service center.*

All Edge programmers are built to operate with OEM calibrations. If you take your vehicle to a service center they may, by your request or otherwise, update your vehicle's calibrations. If this happens and your vehicle has not been returned to stock your device will no longer be capable of programming your vehicle. Therefore it is important that you return your vehicle to stock before taking it in for service. Edge updates its active products (i.e. those currently being manufactured) to work effectively with updated OEM calibrations. However, this process can take some time as Edge is not always made aware of calibration changes made by the OEM. In the case of discontinued products, Edge cannot ensure that your unit will work effectively if you take your vehicle to a dealership and you are given, by your request or otherwise, a new calibration.

**CAUTION:** *If you have used another tuner/programmer on your vehicle, you will need to program the vehicle back to stock and remove the device before using the Edge Product. Failure to return to stock may result in PCM failure or engine damage. Programming your vehicle may expose existing defects in the vehicle's PCM that could disable your vehicle. It is advised that you do not program your vehicle in remote locations in case of vehicle failure.*

**CAUTION:** *The Evo HT programmer was developed on a stock vehicle with no after-market bolt-on parts; as such, the performance changes implemented by the Evo HT may not be compatible with certain aftermarket power add-ons. Refer to the following for a brief explanation of how the Evo HT tuning may be affected by certain aftermarket devices.*

### COLD AIR INTAKE (CAI) KITS

Most modern-day vehicles use a Mass Air Flow (MAF) sensor. The MAF sensor is generally located in the intake tube close to the factory air box. MAF sensors play a key role in determining the amount of fuel an engine needs at any given throttle position. MAF sensors are precisely calibrated for the factory intake systems; changes in intake tube diameter, sensor placement, or filter flow characteristics can adversely affect the reading from the MAF sensor.



 
## **MECHANICAL MODIFICATIONS**

Mechanical modifications such as headers, upgraded camshafts, displacement changes, cylinder head improvements etc., will change the airflow characteristics of an internal combustion engine. The Evo HT is not tailored to take advantage of these modifications, for the best results we recommend vehicle specific custom tuning.

## **FORCED INDUCTION (TURBOCHARGERS OR SUPERCHARGERS)**

Turbochargers and Superchargers drastically change the dynamics/performance of the engine, and its fueling/timing needs. Additional hard parts and custom tuning are required to run a forced induction system on an engine that was originally designed as a Naturally Aspirated (NA) engine. The Evo HT does not support the addition of an aftermarket forced induction kit.





**COPYRIGHT© 2013 REV 01**

*For additional questions not found in the user guide call:*

**Edge Products Technical Support: (888) 360-EDGE (3343) 8:00 am - 5:00 pm MST**

**To expedite your support call, please have your Vehicle Information,  
Part Number, and Serial Number ready prior to calling Technical Support.**

**The Edge Products information is found on the label located  
on the bottom of the device.**