



Locksmith & Unlock Cable *Installation Instructions*

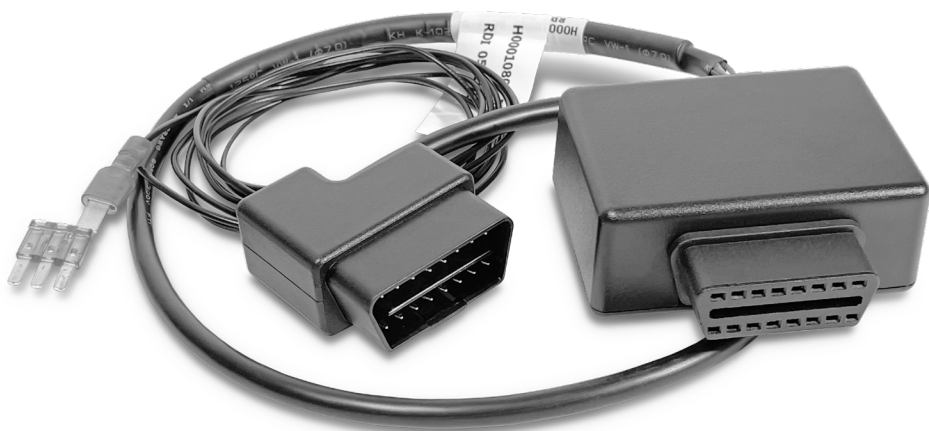

*for 2017-2019 Chevrolet Silverado HD & GMC Sierra HD
with 6.6L Duramax L5P engine*

▲WARNING: *Failure to follow the Unlock Cable instructions in the proper order may result in damage to the vehicle, device, and included hardware. Please refer to all included instructions.*

Unlock Cable Installation Instructions

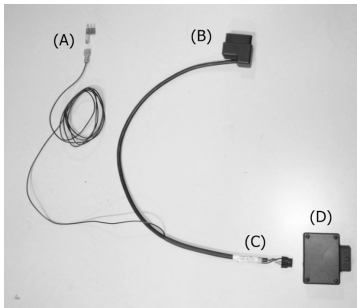

Unlock Cable Part Reference



- (A) 3-Blade Fuse Plug
- (B) Unlock Cable OBD2 Plug
- (C) Unlock Cable
- (D) Locksmith

Your cable also includes a 2-Blade Fuse Plug. This is not used for this vehicle application. Use only the 3-Blade fuse for this install.

For your vehicle to accept tuning, you must perform a one-time unlock process on the Engine Control Module. With this Locksmith kit, you are able to unlock your own ECM using your tuning device without having to remove the ECM from the vehicle or ship it to us. Once the unlock is completed, you do not need to use the cable to install tunes or modify options.

Do not drive your vehicle with the Locksmith and Unlock Cable installed!

NOTE: Before installing the Locksmith and Unlock Cable, make sure you have plugged your tuning device into the vehicle, attempted to tune, and then updated your device using Update Agent 1.0! (See your tuner's user manual for more details).

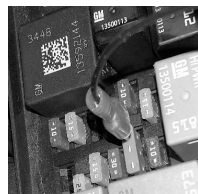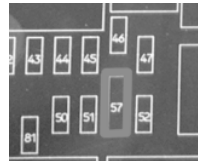

STEP 1 - Go to your vehicle and open the hood. Locate the engine bay fusebox and pull the two tabs indicated by the arrows, and lift on the fusebox lid to remove the lid.

Unlock Cable Installation Instructions Cont'd

STEP 2 - Locate fuse number "57" (TCM/ECM), as indicated on the fuse box lid diagram, and remove it. Do not lose this fuse as you must replace it in this spot later.

STEP 3 - Connect the included 3-Blade Fuse Plug (A) to the Unlock Cable and plug the Fuse Plug into the slot you pulled the original fuse from. Ensure that you orient the Fuse Plug so that the wire is coming out on the side closest to the driver, and furthest from the front of the vehicle.



STEP 4 - Route the Unlock Cable out of the engine bay, around the driver side A-Pillar, and through the open window.

STEP 5 - Plug the Unlock Cable OBD2 Plug (B) into your vehicle's OBD2 Port.

STEP 6 - Plug the Unlock Cable (C) into the Locksmith (D).



STEP 7 - Plug your tuning device's OBD2 Plug (E) into the Locksmith (D). Make sure it is plugged in all the way, as it is a tight fit. Turn on your vehicle's ignition.

STEP 8 - Your tuning device should now power up. Select 'Tune' and follow the on-screen instructions to unlock your vehicle and enable tuning.

Once your vehicle has been unlocked, you are finished with the Unlock Cable, and you will not need to use the cable to install a tune. Remove the Unlock Cable when directed by the device.

Unlock Cable Installation Instructions Cont'd

UNLOCK CABLE REMOVAL - Turn off your vehicle's ignition. Disconnect the Unlock Cable OBD2 Plug (B) from the vehicle's OBD2 Port. Then, you may remove the Fuse Plug (A) from the vehicle's fusebox. Place the vehicle's original fuse back into its slot and put the fusebox lid back on. Plug your tuning device's OBD2 plug (E) into your vehicle's OBD2 Port. You are now ready to tune your vehicle without the Locksmith and Unlock Cable installed.

Page Intentionally Left Blank

Page Intentionally Left Blank

For additional questions not found in the user guide, call:

Holley Technical Support: (888)-360-3343

Mon - Fri 8:00 am - 5:00 pm MST, Sat 8:00 am - 2:00 pm MST

**To expedite your support call, please have your Vehicle Information,
Part Number, and Serial Number ready prior to calling Technical Support.**

Holley[®]
TUNING GROUP

© Copyright 2023 Holley Inc. and subsidiaries. All rights reserved.

D10028600 Rev04 09/29/2023